

Depth Guide

TR3 E-Series

CAUTION: Depths indicated below assume the TR3 E-Series has been set up so the upright masts are running vertically plumb per instructions in the operator's manual. Depths also assume tires are riding on the surface. For softer base materials where tires are prone to sinkage, depths should be adjusted accordingly. It is always advisable to set depths less aggressively and increase incrementally to avoid damage to arena or base material!


TIRE POSITION	PROFILE BLADES			SCARIFIERS			GROOMING RODS		
	Pocket Hole	Blade Hole	Depth	Pocket Hole	Blade Hole	Depth	Pocket Hole	Blade Hole	Depth
1 ST POSITION TOP HOLE	2	2	1.5"	1	1	3"	1	3	3"
	1	1	2"	2	1	4"	2	3	4"
	3	2	2.5"	3	1	5"	3	3	5"
	2	1	3"	4	1	6"	1	2	6"
	4	2	3.5"	5	1	7"	2	2	7"
	3	1	4"						
	5	2	4.5"						
	4	1	5"						
	6	2	5.5"						
	5	1	6"						
2 ND POSITION MIDDLE HOLE	2	2	EVEN	1	1	1.5"	1	3	.5"
	1	1	.5"	2	1	2.5"	2	3	1.5"
	3	2	1"	3	1	3.5"	3	3	2.5"
	2	1	1.5"	4	1	4.5"	1	2	3.5"
	4	2	2"	5	1	5.5"	2	2	4.5"
	3	1	2.5"				3	2	5.5"
	5	2	3"				1	1	6.5"
	4	1	3.5"						
	6	2	4"						
	5	1	4.5"						
3 RD POSITION BOTTOM HOLE	2	1	EVEN	1	1	EVEN	2	3	EVEN
	4	2	.5"	2	1	1"	3	3	1"
	3	1	1"	3	1	2"	1	2	2"
	5	2	1.5"	4	1	3"	2	2	3"
	4	1	2"	5	1	4"			
	6	2	2.5"						
	5	1	3"						

ALL DEPTHS ARE APPROXIMATE AND MAY VARY BASED ON EACH OPERATOR'S SPECIFIC CONTEXT!


CHECK DEPTH ONCE IN USE! BE AWARE OF YOUR BASE

THESE DEPTHS ASSUME NEW WEAR PARTS. AS WEAR PARTS WEAR FROM USE, THIS CHART WILL NO LONGER BE VALID


PROFILE BLADE POCKET HOLES

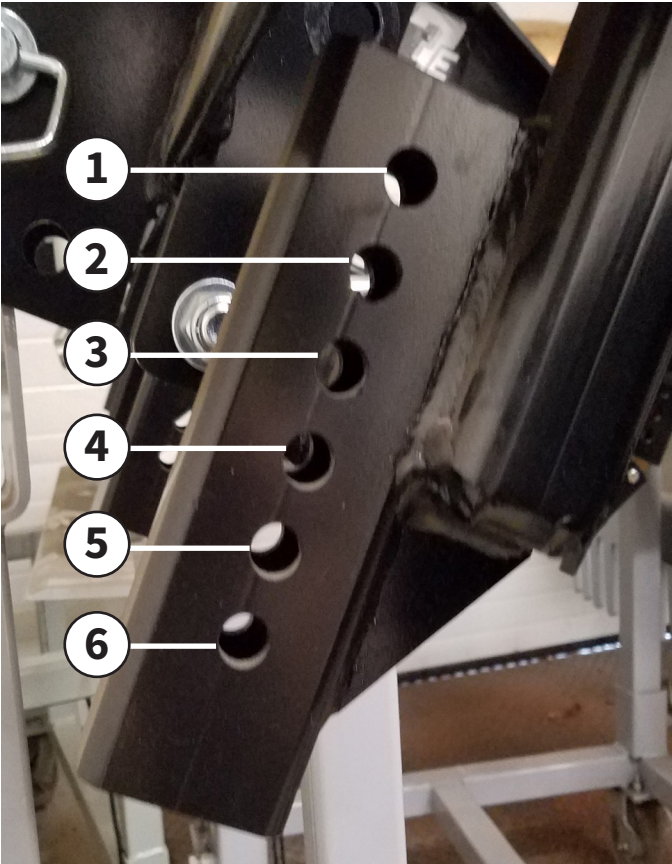


SCARIFIER POCKET HOLES

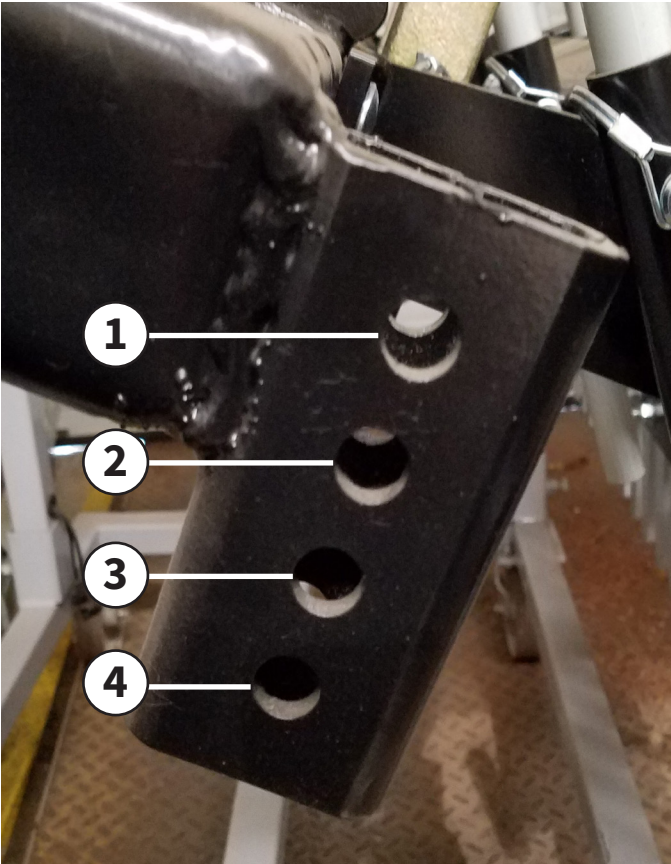


PROFILE BLADE HOLES

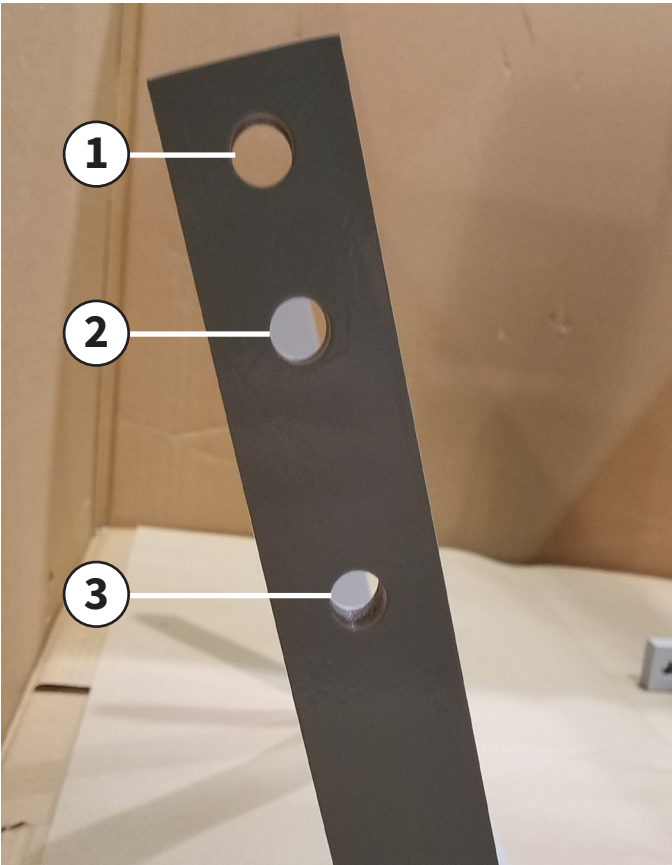

SCARIFIER SHANK HOLES

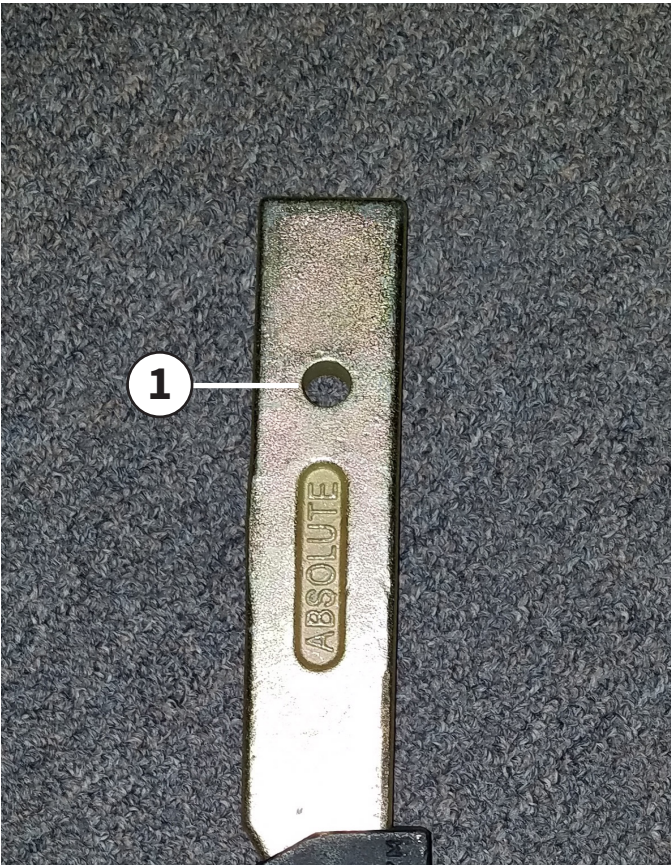

GROOMING ROD POCKET HOLES

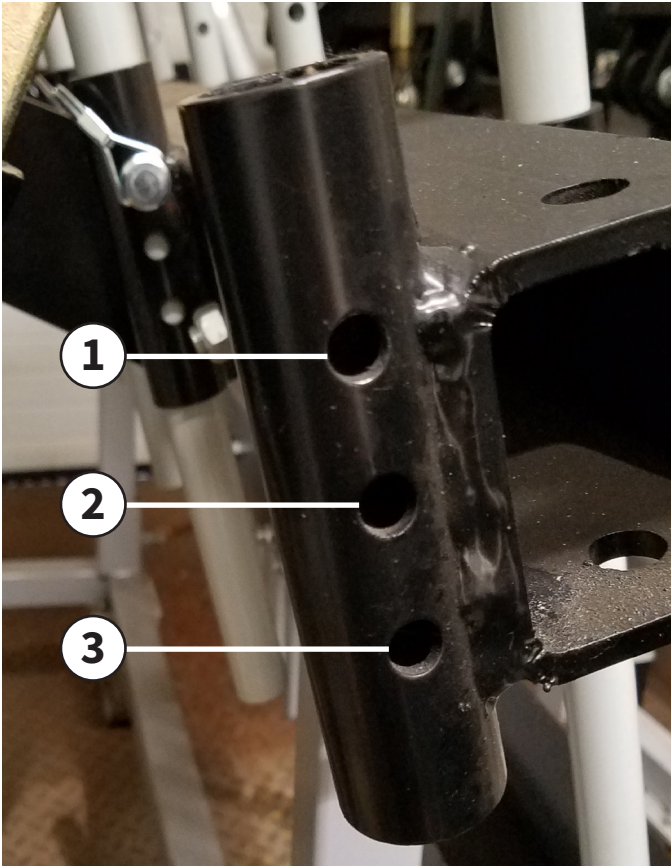

GROOMING ROD HOLES

